


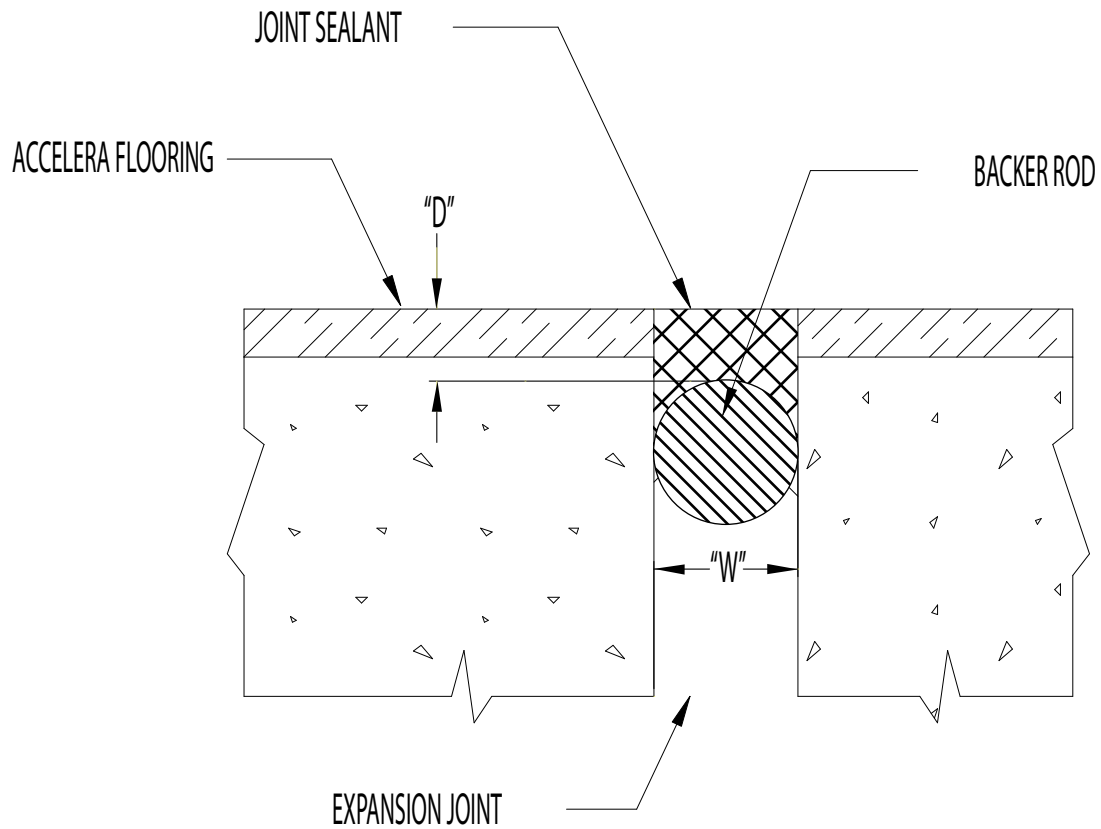

$D = W / 2$
 D = DEPTH OF BACKER ROD
 W = WIDTH OF EXPANSION JOINT

**SHERWIN
WILLIAMS®**

HIGH
PERFORMANCE
FLOORING

sherwin-williams.com/resinflooring
 (660) 638-5089

TITLE

ACCELERERA C, Q, B, HC, HQ, HB
 EXPANSION JOINT DETAIL

DATE

6 / 15

SCALE

NTS

DWG NO.

AF-3

PROJECT