


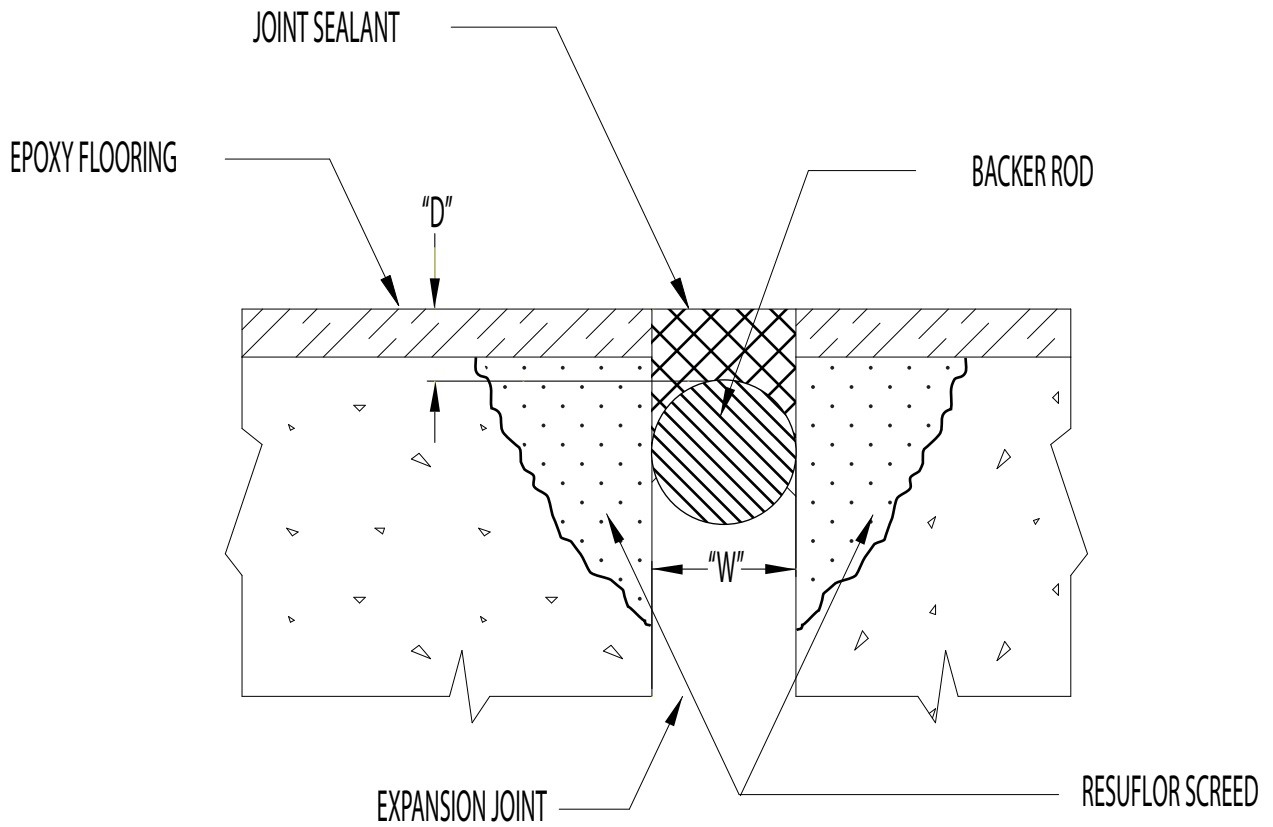

$D = W / 2$
 D = DEPTH OF BACKER ROD
 W = WIDTH OF EXPANSION JOINT

SHERWIN WILLIAMS. | HIGH PERFORMANCE FLOORING

sherwin-williams.com/resinflooring
 (660) 638-5089

TITLE	EPOXY FLOORING EXPANSION JOINT NOSING REPAIR	
DATE 3/25	SCALE AS NOTED	
DWG NO. EF-3A	PROJECT	