


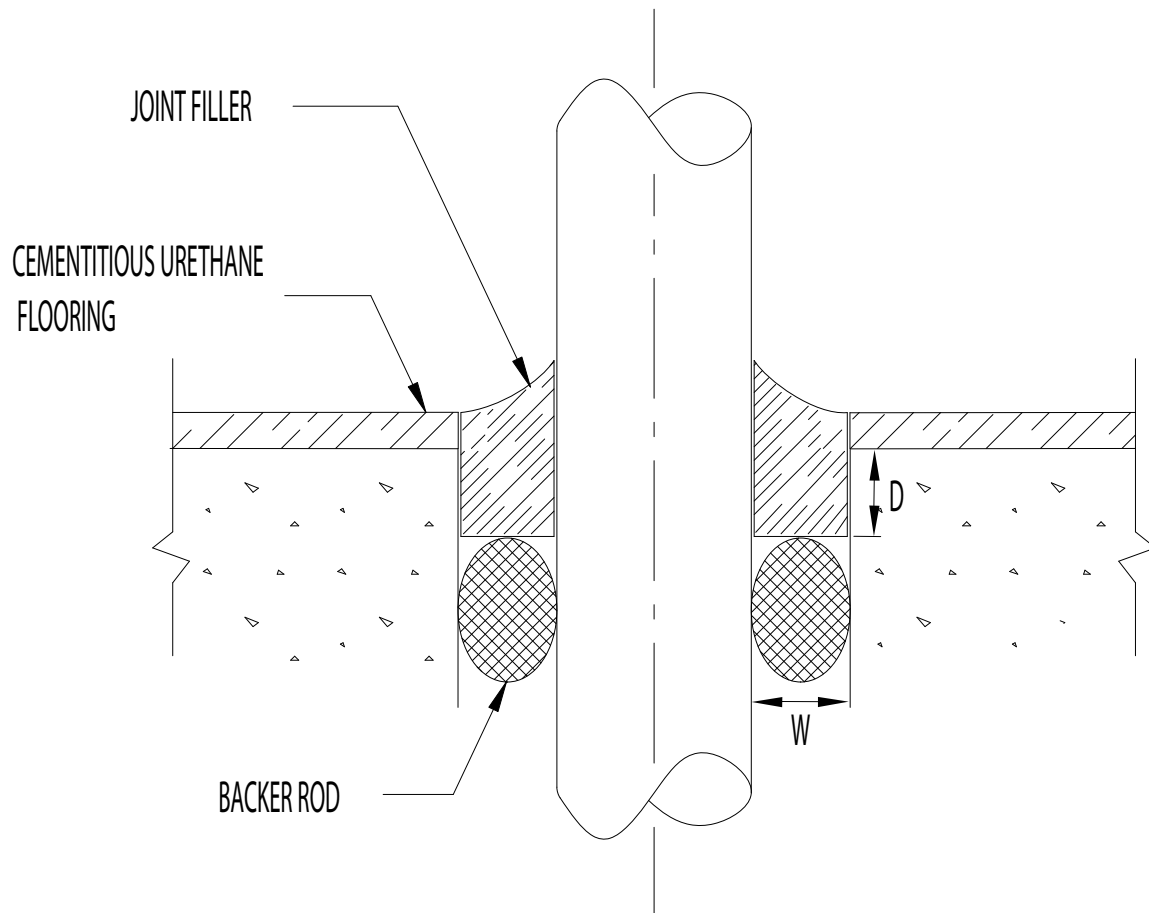

$D = W/2$
 D = DEPTH OF BACKER ROD
 W = WIDTH OF JOINT

**SHERWIN
WILLIAMS®**

HIGH
PERFORMANCE
FLOORING

sherwin-williams.com/resinflooring
 (660) 638-5089

TITLE

POLY-CRETE MD, MDB, MDC, MDQ

PIPE / DUCT BREACHE DETAIL

DATE

10 / 11

SCALE

AS NOTED

DWG NO.

PCMD-13

PROJECT