


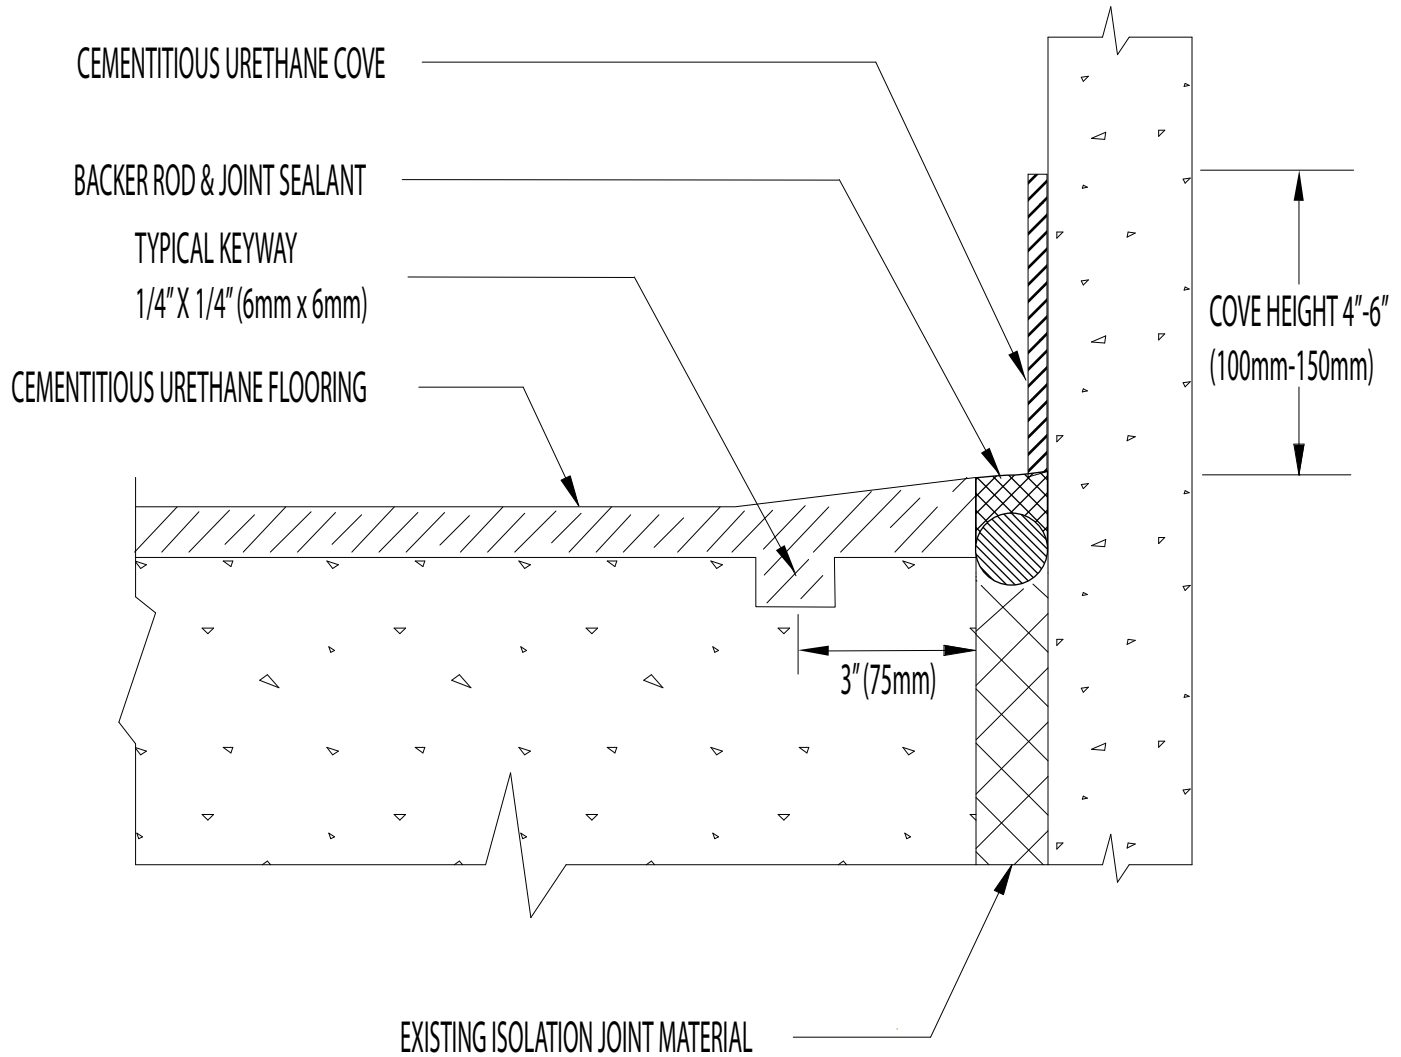

$D = W/2$
 D = DEPTH OF BACKER ROD
 W = WIDTH OF JOINT

**SHERWIN
WILLIAMS.**

HIGH
PERFORMANCE
FLOORING

sherwin-williams.com/resinflooring
 (660) 638-5089

TITLE

POLY-CRETE FLOORING
ISOLATION JOINT DETAIL WITH COVE

DATE

3/25

SCALE

AS NOTED

DWG NO.

PCMD-9

PROJECT